

SPECIFICATION



EV5

MAG High Performance Card Lift Access



EV5 MAG High Performance Lift Access Control Package

General Description

Authorized floor for each user is programmed into the reader through MagEtegra ME-ACS software. Support up to **16000 cards** and **16 floors (max 64 floors)**. Add MAC416 to support additional 16 floors. Multiple EV5 can be linked together. Operator can specify when **(time zone)**, which level **(floor group)** and which elevator **(door group)** user can access.

User gets into the elevator car and flashes the card to the reader installed beside the floor buttons. User is only allowed to select floor that is authorized for his access. Building manager will be able to control, monitor and generate access **log daily, monthly and yearly report from PC**.

Application

Elevator access control system for condominium for a better security to block entry of intruder. Building offices to control employees on which floor employees can access, etc.

Ordering information

Model: EV1

Qty	Parts
1 pcs	Veroc CA413-TKE keypad reader
1 pcs	Veroc CA413-WNE wiegand reader
1 pcs	MAC416 16 relay output interface
1 pcs	AR321L485 interface
2 pcs	MAG Metal box w/ cam-lock (build-in power supply w/ indicator)
1 pcs	Key switch (on-off latch type)
1 pcs	Key switch (on-off latch type) w/ stainless steel plate
2 pcs	2.2K ohm resistor
2 pcs	12V double pole relay with base


Further Upgrade Recommendation via:

- Add a MAC416 interface board to support additional 16 floors. Each EV5 can support maximum 64 floors (4 x MAC416).
- Use RS422 data cable with shielding for RS485 and Wiegand data running. CAT5 or CAT6 is not suitable for wiring inside lift.
- Use MagEtegra Pro-Basic (SEPB) for multiple EV5 over TCP/IP LAN network.

****Please consult our technical specialist for more information on proper wiring to ensure no data loss over long distance.**

Connection Architecture

Standard Installation Setup

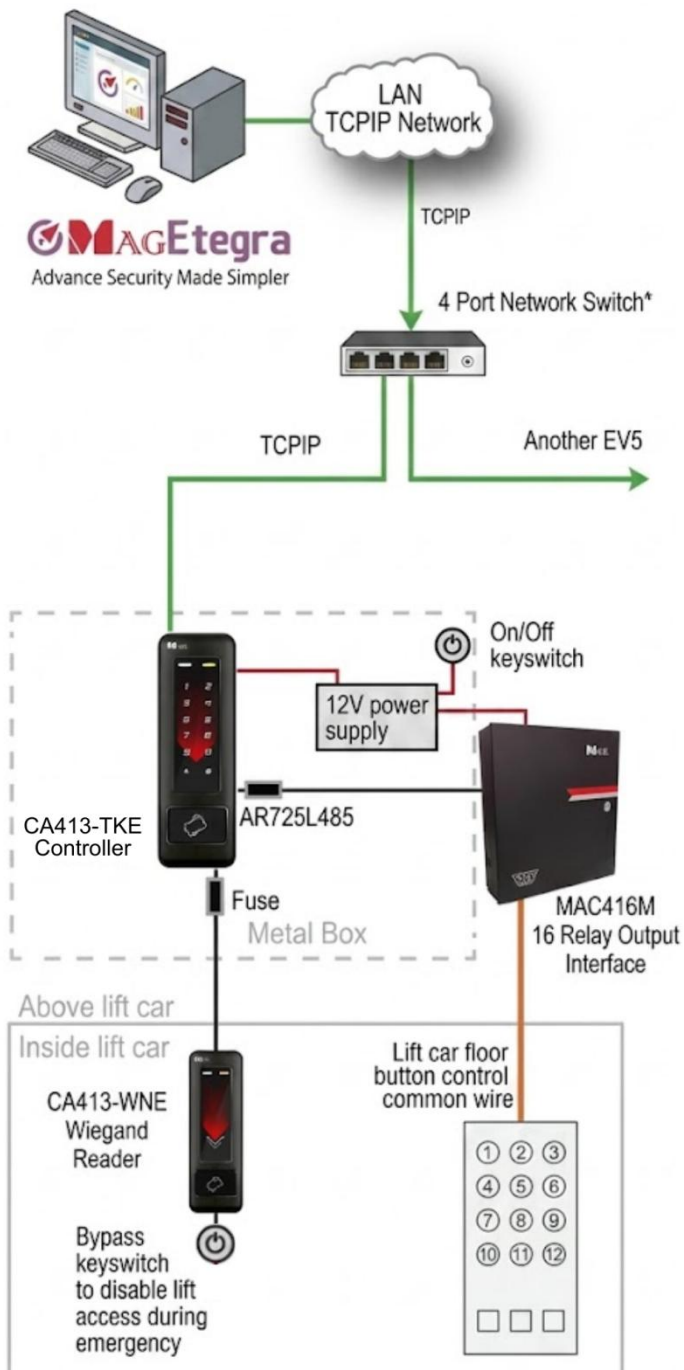

*Network Switch not Included in package

© COPYRIGHT 2026. This documentation served as a reference only. It is subject to change without further notice. All the diagrams and information in this documentation may not be duplicated or modified in any form without the written approval from the management.

Multi-System Deployment

