



# FA131 MAG Face Recognition Reader










# **Device Dimension and Specification**

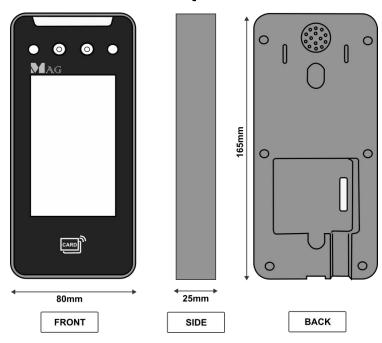


Description	Parameter				
	Face , Card, or PIN				
	Face + PIN,				
Access Mode	Face + Card,				
	Card + PIN				
	Face Only/Card Only/Pin Only				
Validation Display	Name and avatar (enrolled picture as				
validation Display	thumbnail)				
	Without live movement detection: 0.5-2.5m				
Facial Scanning Range	(normal sufficient lighting condition)				
racial Scallling Nange	With live movement detection: 0.5-1.5m				
	( normal sufficient lighting condition)				
Maximum User	5000 User				
Dual Camera	1MP EWL ColorSense Camera and IRSense				
Duai Camera	Camera				
Display Screen	4 inch Full HD Capacitive touch screen				
Operating System	LINUX				
Relay Output	Lock Relay dry contact output (N.O, N.C and				
	COM)				
Push Button Input	Yes				
Communication	TCPIP or WIFI (stability is dependent on				
Interface	wireless signal quality)				
External Wiegand Port	Yes, WG26/34 Output/Input				
Power Supply	DC 12V, 2A				
Ingress Protection	IP4X				





# **Installation Recomendation**

It is recommended to install 2m away from light source and 1.5m installation height from the ground

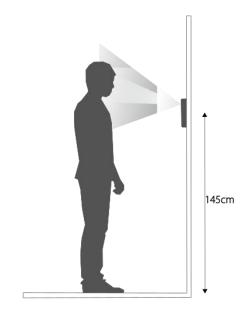


#### **Recommended Installation Height** 145cm ~ 160cm


\*\*Please note that the installation height is based on the average staff height.

#### **Recommended Locations**




Install Indoor Only

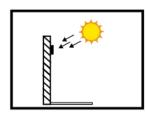

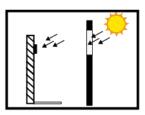

No Direct Sunlight No Indirect Sunlight Dont Too Close to Through Window Light Source

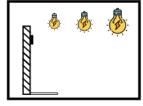


<sup>\*</sup>the device should not be exposed to direct sunlight for long term stability. The LCD and internal electronic might be shorten significantly from direct sunlight exposure. It is recommended to install awning to protect the the reader.





## **Installation on Glass Door/Wall**

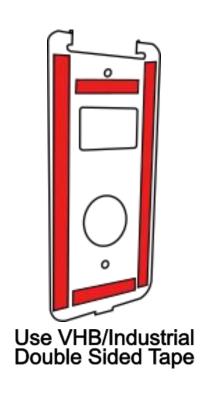



Install The Wall Bracket and device to a Glass Surface

## **Wall Mount Bracket Installation**




Installation to mount the bracket onto the wall

© 2025 QG V1 FA131 MAG Face Recognition Reader



# **Wiring Diagram**

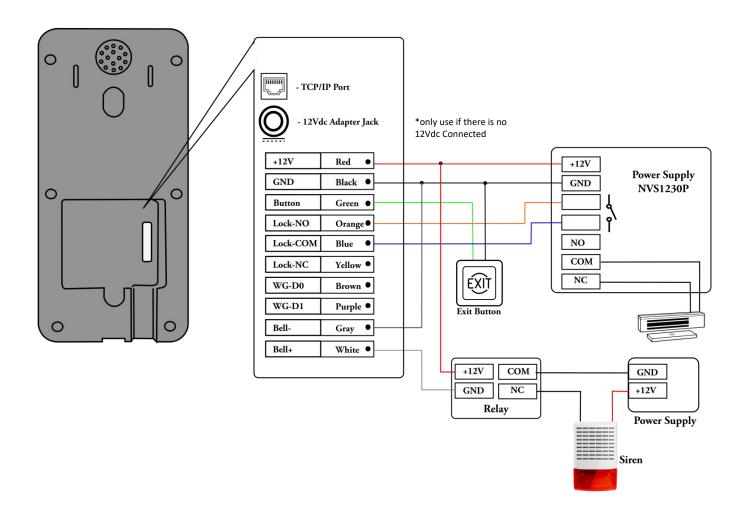

<sup>\*\*</sup>Important: If a 12V DC adapter is being used, do not connect an additional 12V DC power source to the device.




# **Functional Settings**




## 1) Frequency of sending event to ME-ACS software

- Touch the Shift Icon > Change Re verify from 5 sec to 2 Sec frequency

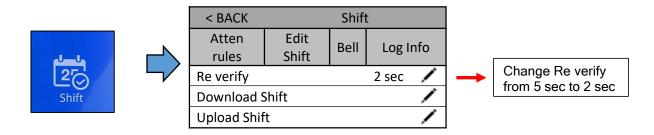

# 2) Sending event to ME-ACS software

- Touch the Comm set Icon > Server > Configure ME-ACS Server information

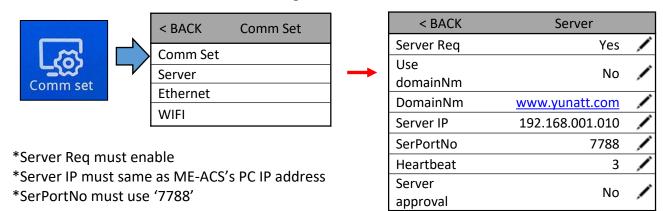

© 2025 QG V1 FA131 MAG Face Recognition Reader




## 3) Reader network IP address

- Reader have a Ethernet and Wifi connection, please only choose one connection at a time


#### **Ethernet Connection.**

- Touch the Comm set Icon > Ethernet > Configure ME-ACS Ethernet information

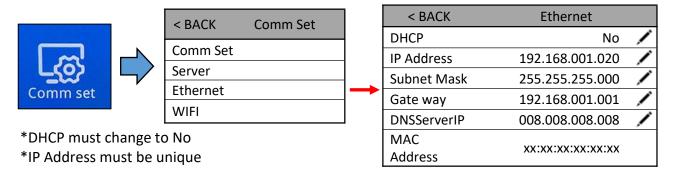

#### WiFi Connection

- Touch the Comm set Icon > WiFi > Search

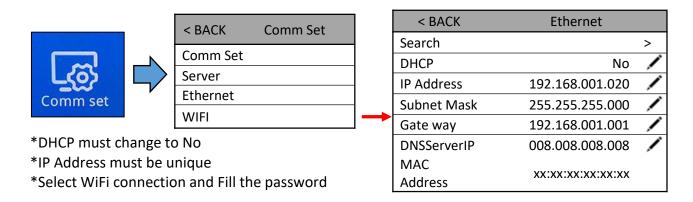


< BACK	Search	
Magnet_Staff	<b>○</b>	<b>—</b>
DLink_12345	0	

< BACK	Ethernet	
Search	Magnet_Staff	^
DHCP	No	/
IP Address	192.168.001.020	/
Subnet Mask	255.255.255.000	/
Gate way	192.168.001.001	/
DNSServerIP	800.800.800	/
MAC Address	xx:xx:xx:xx:xx	



#### 4) Relay output time

- Touch the Access Icon > Access > Configure Access information

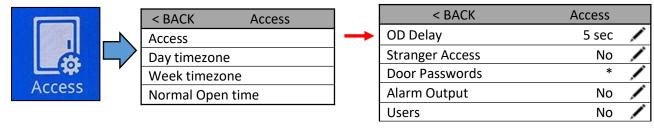

\* OD Delay = Relay trigger duration

\*Stranger Access = Allow open door with any face scan


\*Door Passwords = min 1 digit ~ max 8 digit pin code to open door

\*Alarm Output = to set Alarm Output is using Bell Output Port

\*Users = to enables how many valid user need to scan before can enter

## 5) Range and False Detection

- Touch the System Icon > Configure System information

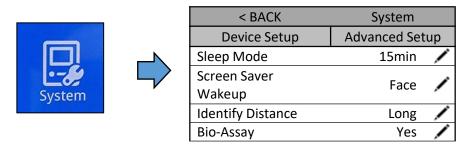

\*Sleep Mode = Duration by minutes to turn off screen

\*Screen Saver Wake up = Wake up screen either by Face or Touch

\* Identify Distance = Short (0.5m) / Middle (1.5m) / Long (3m) Scanning Range

\*Bio-Assay = No = Allow displayed photo to access /

Yes = Not allow displayed photo to access





## **6)** Detection Configuration

- Touch the System Icon > Configure System information





< BACK	Server	
Device Setup	Advanced Setup	
Max Admin	10	/
Verify Mode	FA/C/P	/
1:N Identify	40	
Wear Mask	No	
Mask threshold	50	
Disable Face	No	/

\* Max Admin = How many operator to control the Reader

\* Verify Mode - FA/C/P = Face Access / Card / Passwords Access

- C + FA = Face and Card Access

- Face + Pwd = Face and Passwords Access

- FA+(C/P) = Face and Card / QR or Passwords Access

- C + P = Card and Password Access

- Face Only/Card Only /Pin Only


\* Wear Mask - No = Disable Mask Detection

- Yes = Enable Mask Detection

- Must = Mask compulsory for authorization

## 7) Enabling Web Server

- Touch the Comm set Icon > Embedded WebServer > Configure to enable WebServer

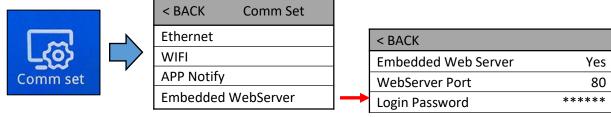

- \* To use Web Server Function, Embedded WebServer , WebServer Port and Login Password must be enable
- \* Once done setting, device need to restart to start the WebServer Service on the device






# **Manual User Enrollment**

## 1) User Registration

- Touch the User Mgt Icon > Add User > Configure the user information and touch Add User to confirm

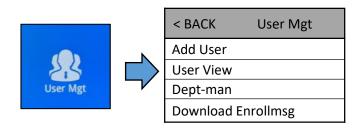

	< BACK	Add User	
	ID	No ID	/
	Name	Staff Name	/
	Dept	Staff Dept	/
(	Add User		

\*ID = User unique ID

\*Name = User name to be displayed

\*Dept = User Department

## 2) User Face Enrollment

- Touch the Face Icon > Take Picture Inside a box > Touch enroll to confirm







- \*Back
- = Back to Add User menu
- \*Change Photos
- = To re-take picture
- \*Enroll
- = To confirm picture taken

# 3) User RFID Card Enrollment

- Touch the RFID Card Icon > Touch the RFID card on the RIFD icon > Click OK to confirm the card enrollment
- \* Each User only has 1 Card only













© 2025 QG V1 FA131 MAG Face Recognition Reader



## 4) User Password Enrollment

- Touch the RFID Card Icon > Input the Password > Click OK to confirm



- \* Each Password set need to verify 1 time
- \* Each User only has 1 Password only

# **Time Attendance**

FA131 only has basic time attendance that can be configured, for more advanced time attandance please refer time attandance by using ME-ACS guide line.

# **Standalone Time Attendance [Device]**

## 1) Attendance Rules Setup

To configure general attendance settings:

Tap the screen to access the main menu.

Navigate to: [Shift] > [Atten Rules]

#### Step 1

First setup Re verify: Prevent duplicate punches within short interval

#### **Step 2: Download Shift Template**

Go to: [Shift] > [Atten Rules]

Insert a USB drive.

Click [Download Shift] to export the template.





#### Step 3: Edit on PC

Use hh:mm time format.

Use numeric values: 0 = Normal, 1 = Overtime.

Avoid full-width or special characters.

#### **Additional Notes:**

- Set cutoff times for overnight shifts. (e.g. 07:00, all time before is consider previous day)
- Combine sections for shifts with untracked breaks. (e.g., Sec 1, 09:00 18:00)
- Use sequential section entries (e.g., fill Sec 1 before Sec 2 and Sec 2 must be fill before fill Sec 3).

	Shift										
Note	: A, shift name:	up to 48 words. B	. Section type: 0	: normal	attendance.1: ov	ertime. C. cut of day	f time: if the	punch before t	he cut off time	it will ca	culate as the previou
	Name IN		Sec1			Sec2		Sec3			
NO.		IN	оит	Sec_t ype	IN	оит	Sec_typ e	IN	оит	Sec_t ype	CutoffTime:
1	Day Shift	08:30	12:00	0	13:30	18:00	0	18:30	21:00	1	00:00
2	Night Shift	22:00	06:00	0							07:00

#### **Step 4: Upload Shift Template**

After Editing, insert the USB disk that has the editing shift file and Click [Upload Shift] to upload the shift that been edited to device.

Go to: [Shift] > [Atten Rules]

Insert a USB drive.

Click [Upload Shift] to upload the template that been edited.

Once Complete Click [Dafault Shift] to assign the default shift for all user

#### **Step 5: Asign Shift to User**

After finished Upload, navigate to User View then select the user to edit the shift for that particular user.

Go to: [User Mgt] > [User View] > [Advance Setup]

Click [Shift] to manual select shift

Please note, each user only can be assigned to one fixed shift, if one user has multiple shift within a month, it need be updated manually.





#### **Step 6: Download Report**

1. Export Attendance Report

Tap the screen > Go to: [Report] Insert USB. Select start & end date. Tap OK.

#### 2. Output:

- Original Sheet Raw clock-in/out logs.
- Schedule Sheet Calculated hours, late/early marks.
- Summary Report Overview of total hours, lateness, leave, and truancy

#### **Note Schedule Sheet:**

**Red text =** abnormal attendance **Blue text =** overtime

# **Standalone Time Attendance [Web Browser]**

#### 1) Attendance Rules Setup

To configure general attendance settings:

Login (Default): Username: admin Password: 12345678

Navigate to: [System] > [Device Setup] > [Shift]

#### Step 1

**First setup Re verify:** Prevent duplicate punches within short interval Default Shift: to select default shift for all user







#### **Step 2: Edit Shift Template**

Go to: [Shift] > [Edit Shift]



Use hh:mm time format.

Use numeric values: 0 = Normal, 1 = Overtime.

Avoid full-width or special characters.

#### **Additional Notes:**

- Set cutoff times for overnight shifts. (e.g. 07:00, all time before is consider previous day)
- Combine sections for shifts with untracked breaks. (e.g., Sec 1, 09:00 18:00)
- Use sequential section entries (e.g., fill Sec 1 before Sec 2 and Sec 2 must be fill before fill Sec 3).


#### Step 3: Asign Shift to User

After finished Upload, navigate to User View then select the user to edit the shift for that particular user.

Go to: [User Mgt] > [User View] > Click on the Edit icon at right end Click [Shift] to manual select shift - Shift 1, is default shift

Please note, each user only can be assigned to one fixed shift, if one user has multiple shift within a month, it need be updated manually.



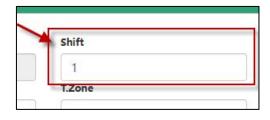





#### **Step 4: Download Report**


1. Export Attendance Report

Tap the screen > Go to: [Report]

Select start & end date.

Tap OK.



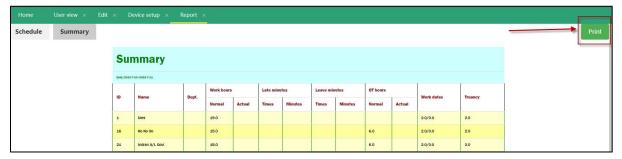

#### 2. Output:

- Click Print to print out the report or save to PDF

#### **Note Schedule Sheet:**

Red text = abnormal attendance

Blue text = overtime

\*Product performances is based on testing in a controlled environment. Your result may vary due to several external and environment factors.





© COPYRIGHT 2025. This documentation served as a reference only. It is subject to change without further notice. All the diagrams and information in this documentation may not be duplicated or modified in any form without the written approval from the management.