



# FR320 Face Recognition Reader

WWW.MAG.COM.MY



Technical Specification				
Description	Parameter			
Access Mode	Face , Card, PIN or QR code. Face + PIN, Face + Card, Face + QR code. Face Only/Card Only/Pin Only			
Validation Display	Name and avatar (enrolled picture as thumbnail)			
Facial Scanning Range	Without live movement detection: 0.5-3m (normal sufficient lighting condition) With live movement detection: 0.5-1.5m (normal			
	sufficient lighting condition)			
Display Screen	5 inch Full HD Capacitive touch screen			
Operating System	LINUX			
Relay Output	Lock Relay dry contact output (N.O, N.C and COM) Alarm Relay transistor output (-12V)			
Relay Input	Door sensor			
Push Button Input	Yes			
Communication Interface	TCPIP or WIFI (stability is dependent on wireless signal quality)			
External Wiegand Port	Yes, WG26/34 Output/Input			
Power Supply	DC 12V, 2A			

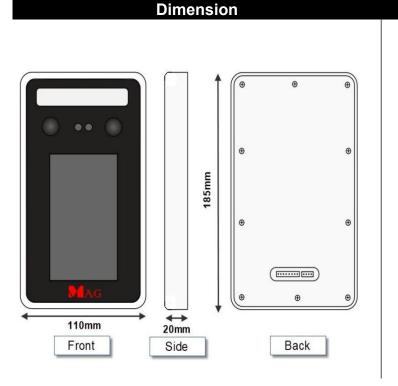


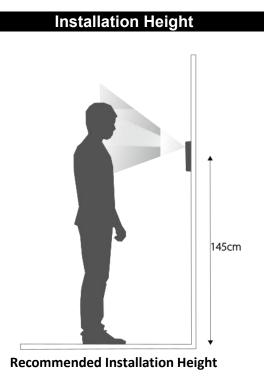

## Pedestrian gate bracket mount


#### Wall mount



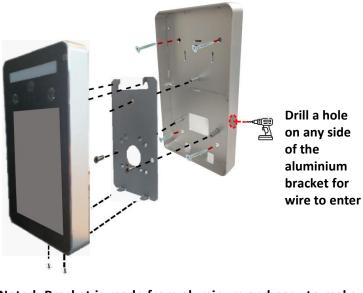


Noted: Bracket is made from aluminum and easy to make a hole for surface installation \*Wall Mount Sold Separately


#### Wiring diagram and connection

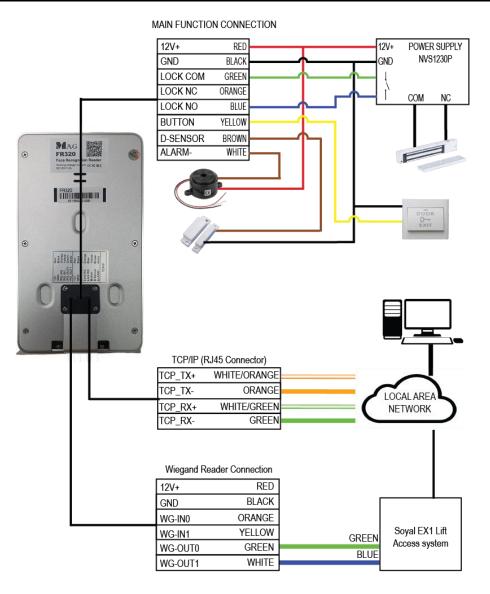


### **Functional setting**

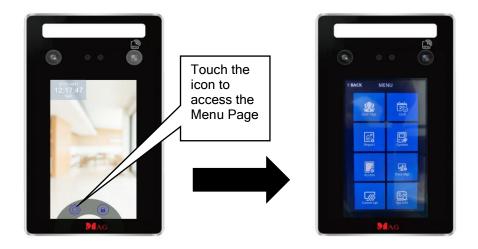

# 1) Frequency of sending event to ME-ACS

 

# 2) Sending event to ME-ACS

 

< BACK	Comm Set	
Comm Set		
Server		
Ethernet		
WIFI		


\*Server Req must enable

\*Server IP must same as MagEtegra PC IP address \*SerPortNo must use '7788'

< BACK	Server	
Server Req	Yes	/
Use domainNm	No	/
DomainNm	www.yunatt.com	/
Server IP	192.168.001.010	/
SerPortNo	7788	/
Heartbeat	3	/
Server approval	No	/

# 3) Reader network IP address



 

< BACK Ethernet DHCP No **IP Address** 192.168.001.020 Subnet Mask 255.255.255.000 Gate way 192.168.001.001 DNSServerIP 008.008.008.008 MAC Address 02:a9:31:a1:44:9f

\*DHCP must change to No. \*IP Address must in unique

# 4) Relay output time

		< BACK Access	< BACK	Access	
	Access	 OD Delay	5 sec	/	
	>	Day timezone	Sensor Mode	NG	/
Access		Week timezone	Sensor Delay	10 sec	/
		Normal Open time	Stranger Access	No	1
				N.L	

\* OD Delay = Relay trigger duration

\* Sensor Mode = Magnetic Contact for NC/NO/NG

\*Sensor Delay = Alarm delay duration upon door open

\*Stranger Access = Allow open door with any face scan

\*Stranger RFID Access = Allow open door with any card scan

\*Door Passwords = min 1 digit ~ max 8 digit pin code to open door

### 5) Range and False Detection

	< BACK	Server		
	Device Setup	Advanced Setup		
	Sleep Mode	15min		
<u>-</u>	Screen Saver Wakeup	Face		
System	Identify Distance	Long		
	Bio-Assay	Yes		
	Show Avatar	No		

\*Sleep Mode = Duration by minutes to turn off screen

\*Screen Saver Wake up = Wake up screen either by Face or Touch

\* Identify Distance = Short (0.5m) / Middle (1.5m) /Long (3m) Scanning Range

\*Bio-Assay = No = Able to use photo to access / Yes = Not able to use photo to access

\*Show Avatar = No = Does not display thumbnail photo / Yes = Display thumbnail photo

< BACK	Access	
OD Delay	5 sec	/
Sensor Mode	NG	1
Sensor Delay	10 sec	/
Stranger Access	No	1
Stranger RFID Access	No	/
Door Passwords	*	/

### 6) Mask Detection



< BACK	Server	
Device Setup	Advanced Setup	
Max Admin	10	/
Verify Mode	FA/C/P	/
QR Code	Card -> QR Code	/
1:N Identify	52	/
Live threshold	10	/
Wear Mask	No	/
Mask threshold	50	/

- \*Max Admin = How many operator to control the Device
- \* Verify Mode FA/C/P = Face Access/ Card/QR Access/ Passwords Access
  - Face + Pwd = Face and Passwords Access
  - FA + C = Face and Card Access/ Face and QR code Access
  - C + P = Card/QR Code and Passwords Access
  - FA+(C/P) = Face and Card/QR or Passwords Access
  - Card Only/ Face Only / Pin Only
- \* QR Code No = Disable QR Function
  - Visitor QRCode = Not Applicable
  - Card -> QR Code = Card Number convert to QR code
  - Server QR Code = Not Applicable
- Wear Mask No = Mask Detection disabled
  - Yes = Mask Detection enabled
  - Must = Mask compulsory for authorization

### **User Enrollment**

#### 1) User Registration

- Touch the User Mgt Icon > Add User > Configure the user information and touch Add User to confirm

		< BACK	User Mgt		< BACK	Add User	
	ĸ	Add User		-	ID	No ID	/
3		User View			Name	Staff Name	/
Mgt		Dept-man			Dept	Staff Dept	/
		Download Er	nrollmsg	Contraction (1998)	Add User		

\*ID = User unique ID

- \*Name = User name to be displayed
- \*Dept = User Department

# 2) User Face Enrollment

- Touch the Face Icon > Take Picture Inside a box > Touch enroll to confirm



\*Back \*Change Photos \*Enroll

- = Back to Add User menu
- = To re-take picture
- = To confirm picture taken

### 3) User RFID Card Enrollment

- Touch the RFID Card Icon > Touch the RFID card on the RIFD icon > Click OK to confirm the card enrollment

\* Each User only has 1 Card only



# 4) User Password Enrollment

- Touch the RFID Card Icon > Input the Password > Click OK to confirm





\* Each Password set need to verify 1 time \* Each User only has 1 Password only



© COPYRIGHT 2024. This documentation served as a reference only. It is subject to change without further notice. All the diagrams and information in this documentation may not be duplicated or modified in any form without the written approval from the management. © 2024 MAG FR320